

# **INSTRUCTION BOOKLET FOR POWERED DRIVE ROLLS**

## **MODELS:VS-RF**



200 Circuit Drive • North Kingstown, Rhode Island 02852 • USA  
International Phone: 401-781-7800 • Toll Free: 800-338-7268 • Fax: 401-738-2586 •  
• Internet Address: [www.durantco.com](http://www.durantco.com) •

ATTENTION: PLANT MANAGER

Thank you for purchasing Durant equipment. Enclosed are very important safety instructions, operating instructions, and setup procedures.

Read all these materials completely and carefully. Please distribute copies to your SAFETY MANAGER, PRODUCTION MANAGER, and MACHINE OPERATORS.

If there is any help required in setup or operation, we will be readily available for your assistance.

Thank you again and we look forward to developing and maintaining a fine relationship with your company.

Sincerely,

DURANT TOOL COMPANY

## **SAFETY INSTRUCTIONS FOR ALL DURANT EQUIPMENT**

The enclosed information and instructions must be forwarded and distributed to the Plant Safety Director, Plant Manager, Production Manager, and all Operators of Durant equipment.

Operators of Durant equipment must have a minimum of (3) three years operating experience with similar Durant press room equipment or a minimum of (3) three years experience with identical equipment manufactured by other press room equipment manufacturers.

### **WARNING**

Never operate, install, or maintain this machine without understanding the complete and safe operation thereof.

It is the employer's responsibility to provide proper safety devices and equipment to safeguard the operator from harm and to safeguard this machine at all times to meet all current government safety codes and standards.

### **CAUTION**

All Durant equipment must be securely fastened to the floor. This will prevent the machine from tipping. Failure to follow the above instructions could cause harm to the operator or machine.

### **ATTENTION**

If any danger points are observed:

1. Immediately stop machine.
2. Do not run machine until danger point is eliminated.
3. Report danger point in writing to your employer.
4. Keep a copy of your report for your records.
5. Do not run machine again until danger point has been corrected.
6. It is your employer's responsibility to safeguard this machine to meet all government safety codes and standards.
7. There are U.S. companies that specifically specialize in safe guarding machines to plant requirements and government codes. The safe guarding companies are located throughout the United States, Canada, and foreign countries. Representatives will visit your site to advise and recommend safe guarding procedures for your company.

### **IMPORTANT**

Before the first use and monthly thereafter, all nuts, screws, and bolts should be checked for tightness. Gears, sprockets, chains, and belts should also be checked for tightness.

Grease and oil fittings and reducers monthly.

## POWERED DRIVE ROLLS

1. Release top roll of the drive unit.
2. Insert a piece of material. This material should pass through freely.
3. Tighten the top roll. Do not overtighten so the material will be “ironed”.
4. Flow your material between the antenna probes on the CLC Contact Loop Control provided.
5. See instruction sheets provided for operating the CLC Contact Loop Control.

**INSTRUCTION BOOKLET FOR**

**CONTACT LOOP CONTROL**

**MODEL #CLC-1**

## On/Off ANTENNA-TRACKER

### Mechanical Setup:

1. Antenna stand is supplied in two pieces, a cast base & pole. The pole screws in the base.
2. The main enclosure which is 6”H x 4”W x 4”D and is to be mounted to the antenna stand via clips supplied on back of enclosure.
3. **Unwind** applications: Red antenna to be located at the bottom of the stand. Black antenna to be located at the top of the stand.  
**Rewind** applications: Black antenna to be located at the bottom of the stand. Red antenna to be located at the top of the stand.

### Wiring Setup:

1. Supply Voltage: 115 vac 1 phase, 60 hz [L1=TB1-1, N=TB1-2] ORANGE MALE CORD
2. Ground terminals to be connected to the earth ground. [Tb1-3,4,5]  
*(Note: Your material and equipment must be earth grounded for this system to function).*
3. E-Stop circuit. TB 3-4 is the terminal for the E-Stop circuit. A N/C E-Stop Pushbutton should be connected between Ground TB1-3 & TB3-4.  
*(Note: If you are not using the E-Stop circuit you must place a jumper between terminals TB3-4 & TB1-3!)*
4. Output: Form “C” Relay contact. [TB2-5= common, TB2-3=N/C, TB2-2=N/O] ORANGE CORD *(Relay contacts are fused at 5 amps).*
5. Output: 115VAC On/Off. ORANGE FEMALE CORD *(Relay contacts are fused at 5 amps).*

### Operation Procedure:

1. When the grounded material (or ground terminals) touch the terminal TB3-2 the internal Relay Energizes. BLACK ANTENNA
2. When the grounded material (or ground terminals) touch the terminal TB3-5 the internal Relay De-Energizes. RED ANTENNA

### Terminals:

TB1-1 = LI (115 vac)  
TB1-2 = Neutral (115 vac)  
TB1-3 = Ground terminal  
TB1-4 = Ground terminal  
TB1-5 = Ground terminal  
TB2-2 = N.O. Isolated Contact  
TB2-3 = N.C. Isolated Contact  
TB2-5 = Common Isolated Contact  
TB3-2 = Relay energize (On) circuit  
TB3-4 = E-Stop circuit  
TB3-5 = Relay De-energize (Off) circuit